

S I m A G

Via Risorgimento, 4 - 20017 Mazzo di Rho (Mi) Italy - Tel: +39 02 93900215 - Fax: +39 02 93900226


Web site : www.simag.it - e-mail sales : sales@simag.it - e-mail service : service@simag.it

SERVICE BULLETIN – 01/JULY 2004

SP-SPR SERIES

PC BOARDS

As detailed on the Service Manual of our SP and SPR Electronic Flakers Series, the Jumper J1 is used to energize the whole electrical parts of the machine during the earth leak test performed at the end of the assembly line.

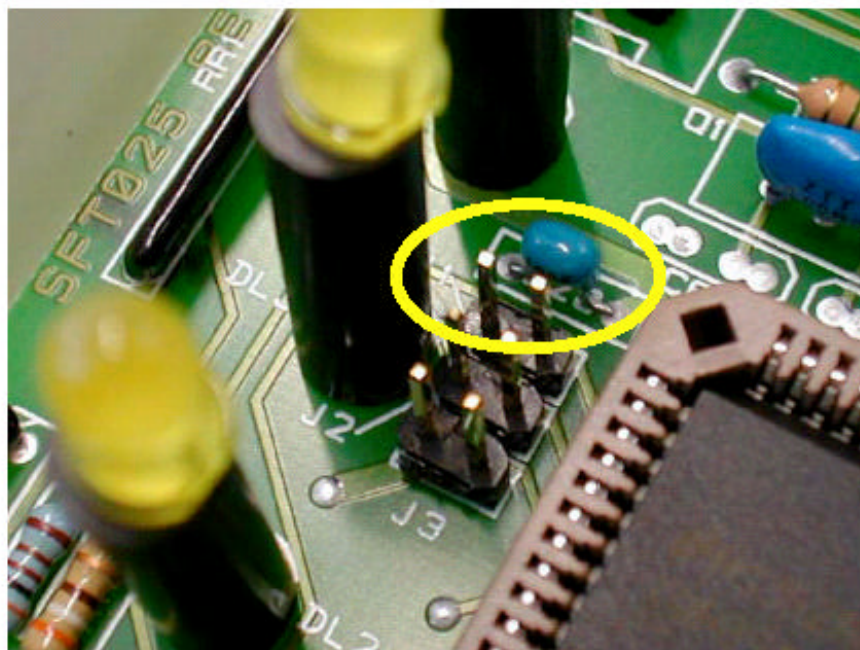

In case the two contacts of this Jumper -J1- are connected together, the machine remain in operation for maximum 5 minutes without noticing any possible alarm condition.

At the end of the 5 minutes the PC Board trip OFF the operation of the entire machine with the blinking of all yellow and red LEDS, see simulation below.

